


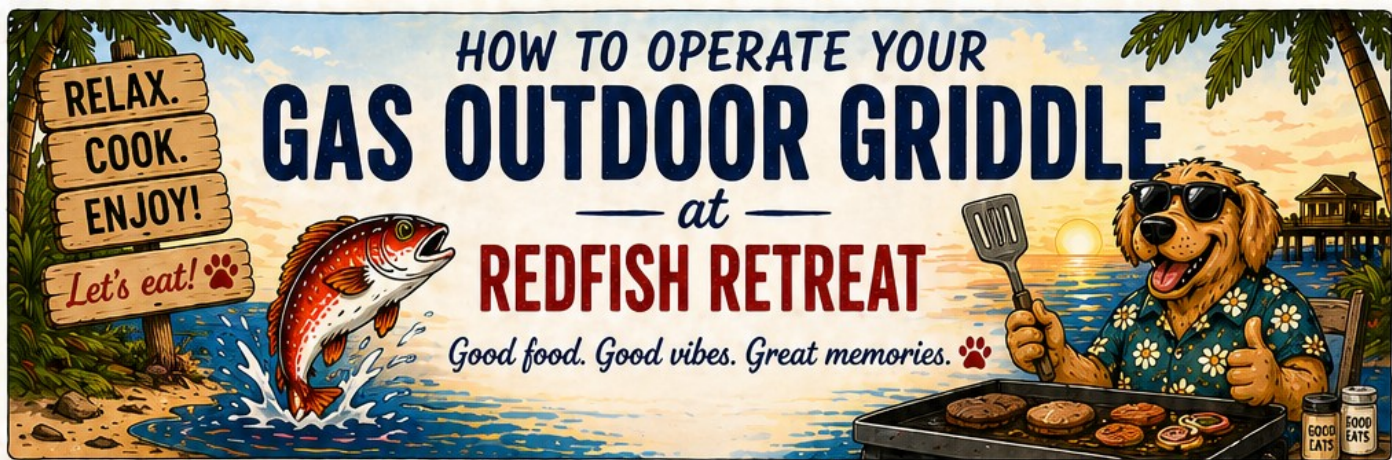

1 CHECK BEFORE YOU START

- ✓ Griddle is on a flat surface.
- ✓ Grease tray is in place and empty.
- ✓ Gas tank is connected and valve is **OPEN**.



OPEN



2 LIGHT THE GRIDDLE

- Push in and turn the ignition knob to **HIGH**.
- You will hear the click.
- Burner should light.
- If it doesn't light, see *Troubleshooting* below.



3 PREHEAT

- Close the lid.
- Let the griddle preheat on **HIGH** for **10-15 minutes**.
- This gets it nice and hot!



4 COOK & ENJOY!

- Open the lid.
- Adjust burners as needed.
- Use metal spatulas on the surface.
- Have fun & make something delicious!



5 WHEN YOU'RE DONE

- Turn all knobs to **OFF**.
- Close the gas tank valve.
- Let griddle cool completely before cleaning or covering.



CLOSED

6 CLEAN THE GRIDDLE

- Scrape food into the grease tray.
- Wipe the cooking surface with a griddle cleaner or warm water.
- Do not use steel wool.
- Empty the grease tray after each use.



7 SEASON THE SURFACE (OPTIONAL BUT GREAT!)

- Lightly coat the surface with cooking oil.
- Wipe across the top while warm.
- Helps protect the surface and keeps food from sticking!



8 COVER IT UP

- Once cooled, put the cover on to protect your griddle from the Florida weather.



Thanks friend!

TIPS FOR GREAT COOKING

- ★ Preheat every time!
- ★ Keep the surface clean for the best flavor.
- ★ Use a little oil or butter for eggs and veggies.
- ★ High heat for searing, medium for cooking, low for keeping warm.



! TROUBLESHOOTING

BURNER WON'T LIGHT?

- Make sure tank valve is **OPEN**.
- Check that the knob is pushed in while turning to **HIGH**.
- Make sure you hear the click.
- If still not lighting, wait 5 minutes and try again.



Still not working? Message us!



LOW FLAME OR UNEVEN HEAT?

- Check gas level.
- Make sure hose is not kinked.
- Make sure burners are clean.
- Close lid and preheat a little longer.



! IMPORTANT REMINDERS !

- ⚠ **NEVER** leave griddle unattended while in use.
- ⚠ **KEEP** kids and pets back while cooking.
- ⚠ **DO NOT** use abrasive cleaners or steel wool.
- ⚠ **ONLY** use outdoors.
- 😎 **ENJOY & be safe!**



Thanks for taking care of our home! 🐾

NOW GRAB A DRINK, FIRE UP THE GRIDDLE, AND ENJOY!

