



1 LOAD IT UP

Open the washer (bottom machine) and load your clothes.

Don't overload the drum.

2 ADD DETERGENT (USE OUR PODS!)

We provide laundry pods for your stay!

- Place 1 pod directly into the washer drum.
- Add clothes on top of the pod.

DO NOT put pods in the detergent drawer.

★ **PODS ARE LOCATED:** In the glass container on the shelf.

Pod goes **IN** the drum... not the drawer!

3 CLOSE & SELECT CYCLE

Close the washer door.

Turn the cycle knob to choose your wash cycle.

NORMAL
 WHITES
 TOWELS
 BULKY BEDDING
 SANITIZE w/ Oxi

QUICK WASH
 DELICATES
 COLD WASH
 ACTIVE WEAR
 RINSE & SPIN
 SELF CLEAN

4 ADJUST SETTINGS

Use the buttons to adjust:

- Temp (Temp)
- Spin (Spin)
- Soil (Soil)
- Extra Rinse (options)

Wash Rinse Spin Lock
 45
 Temp Spin Soil Extra Rinse
 Start Pause

5 START THE WASHER

Press the START/PAUSE button.

The lid will lock and the cycle will begin.

6 MOVE TO DRYER

When the washer is done, remove clothes and transfer to the DRYER (top machine).

Clean the lint filter before each load!

Pull out the lint filter, remove lint, and slide it back in.

7 SELECT DRY CYCLE

Turn the dryer cycle knob to choose your setting.

- Cottons
- Easy Care
- Delicates
- Timed Dry

Cottons
 Easy Care
 Delicates
 Timed Dry
 Steam Refresh
 Start

8 ADJUST OPTIONS

Use the buttons to adjust if needed:

- Temp
- Dry Level
- Wrinkle Care
- More Time/ Less Time

(Options may vary)

Temp
 Dry Level
 Wrinkle Care
 More Time/ Less Time

9 START THE DRYER

Press the START button.

The dryer will start. The light will show the progress.

Start
 Drying Cool Down Done

10 ENJOY CLEAN CLOTHES!

Remove clothes promptly when done and enjoy your stay at Red Fish Retreat!

Now go catch some memories!

FRIENDLY REMINDERS

- Use HE (High Efficiency) detergent only.
- Do not overload the machines.
- Leave the machines clean for the next guest. Thank you!
- Clean lint filter before each dryer load.